



----- Cut here to remove. Do Not Tear! -----

## SCOUT UL2 SET UP INSTRUCTIONS

1. Remove contents from stuff sack. Spread tent body out on ground.
2. Stake out the four corners of the tent.
3. Stand in front of the door and locate above the door a black patch which is under the extending rain flap.
4. Keeping the pole on the outside of the tent, insert the tip end of your trekking pole onto the black patch and pull out the extensions of the pole until the front of the tent is raised and taut leaving the handle of the trekking pole to rest on the ground.
5. Climb into the tent and locate the black patch in the back center on the floor of the tent. Locate the corresponding black patch on the ceiling of the tent to the one the floor.
6. Insert the tip of the second trekking pole into the ceiling black patch and pull out the extensions of the pole until the back of the tent is raised and taut and the handle of the trekking pole sits in the black patch on the tent floor.
7. Stake out all guylines.



Cut here to remove. Do Not Tear!



P.O. Box 773072 • Steamboat Springs, Colorado • 80477  
Toll Free: 877.554.8975 • [www.bigagnes.com](http://www.bigagnes.com)

For more information on Tent Care or our Warranty and Return policy, see [www.bigagnes.com](http://www.bigagnes.com) or call 970-367-4400.

must be clean and free of debris.

at the discretion of Big Agnes, at a reasonable charge. Tents returned for repair Damage due to misuse, normal wear and tear, or improper care may be repaired, by owner, misuse, accidents or damages caused by uses other than intended. do not warranty products damaged from normal wear and tear, alteration made All Big Agnes tents are guaranteed against manufacturing or material defect. We

### Repairs and Warranty

lubricants because they attract dirt.

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent. Try to avoid liquid

### Zippers

your tent. Damage caused by misapplication may void warranty. extra protection. Make sure the seam-sealer is completely dry before re-packing been taped do not need to be seam sealed with a liquid sealer unless you want Seam tape alone is durable enough to prevent water leakage. Any seams that have

### Seam Sealing

dishwashing liquids.

fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or machine-wash your tent. Detergents and dry cleaning solvents will damage the recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or wash the entire tent, always use cleaners recommended specifically for tents. We For light cleaning, you can sponge the tent with warm water. If it's necessary to

### Cleaning

not covered under warranty.

growth, which may cause your tent to smell, leak or delaminate. Mildew damage is as it will damage the material coatings. Storing your tent damp can result in mildew place. Never leave your tent in hot temperatures (such as a car trunk or attic space), your tent a different way each time to avoid permanent creases. Store in a cool, dry Always make sure your tent is dry and free of debris before storing. Stuff or fold

### Storage

## TENT CARE

- Push rather than pull poles through pole sleeves.
- material.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- increase space and keep your tent from becoming a tumbleweed.
- Big Agnes tents are all freestanding, but we recommend staking them out to
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- tumbling around in the dark.
- using them for the first time to avoid late night bickering with tent mates while
- Our tents are easy to set up but we suggest you practice once at home before

## HELPFUL HINTS FOR TENT SET UP

[tech@bigagnes.com](mailto:tech@bigagnes.com)

Please feel free to contact us if you have any questions or comments.

Thanks for choosing a Big Agnes tent!

